


# Assembly Instructions

## BIN UNIT

MODEL  
B-49  
1W692

### PARTS LIST

REFERENCE LETTER	QUANTITY AND DESCRIPTION	PART NUMBER
A	<input type="checkbox"/> 1 Top Shelf	1W692TS
B	<input type="checkbox"/> 1 Lower Shelf	1W692LS
C	<input type="checkbox"/> 2 Side Panels	1W692SP
D	<input type="checkbox"/> 49 Dividers	1W692D
E	<input type="checkbox"/> 6 Intermediate Shelves.	1W692IS
F	<input type="checkbox"/> 1 Back Panel	1W692BP
*	<input type="checkbox"/> 1 Hardware Pack	1W692HP

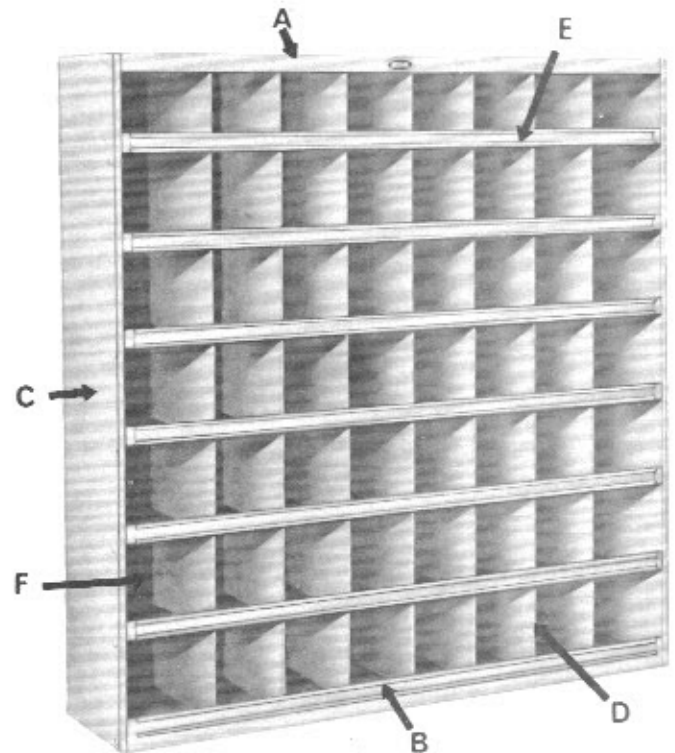

### HOW TO ASSEMBLE UNITS

1. Bolt basic cabinet together, starting with top shelf (flange turned down and no label holder) and bottom shelf (with base plate attached). Back panel should be placed between rear flange of side panels and shelves. Start by placing bolts through side panels first and continue with 4 bolts in rear.
2. Position and bolt 6 intermediate shelves into basic cabinet. Front of each shelf (with label holder) should be in an up position. Bolt shelf in complete at side and at four points in rear.
3. Insert seven (7) dividers on each shelf (hemmed edge to front) with top and bottom flange facing the right side of the unit. Keep all dividers facing in the same direction throughout the entire unit. Place first divider into 3rd hole from right side and continue on at each 2nd hole until all seven dividers are inserted. Insert spring clips through lower flange of the upper divider, through top of shelf and upper flange of lower divider.
4. Again check all bolts for tightness. Your bin unit no. 49 should be ready for years of continuous use.



4400 South Packers Avenue • Chicago, Illinois 60609

MANUFACTURERS OF QUALITY STEEL EQUIPMENT FOR INDUSTRY, OFFICE & INSTITUTIONS